



PRINTING AND FITTING INSTRUCTIONS


1. Print this document on A4 sheets of paper (21 x 29.7 cm).
2. Ensure you print at 100% scale.
3. Measure both sides of this box to check the scale is correct.
4. Fit the prints together following the numbering system on the edge of each sheet. Ensure crosses are aligned.
5. Tape the sheets together and cut around the pack's outline.
6. When fitting this printed template to your bike, keep in mind that the fit will be somewhat flexible as the product is built from fabric.

10 cm
3.9 in

10 cm / 3.9 in


This Hypalon stability strap is
22 cm long (8.7 in)

EXPEDITION
FRAME PACK
4.3L

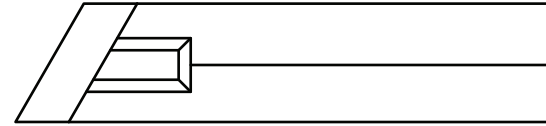

EXPEDITION
4.3L

SCALED EXAMPLE OF FINAL TEMPLATE

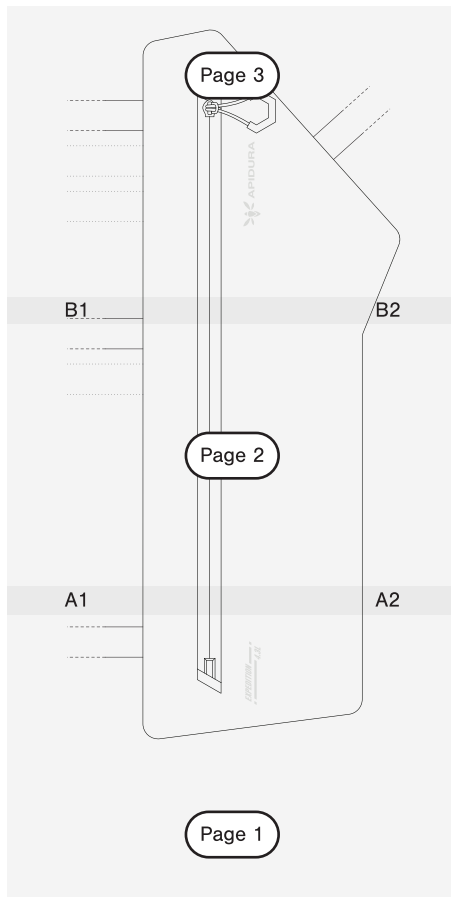



A1



B1

.....

This Hypalon stability strap is
22 cm long (8.7 in)

.....
.....
.....
Alternative placement for
Hypalon stability strap
.....



A2



B2

This Hypalon stability strap is
22 cm long (8.7 in)

Alternative placement for
Hypalon stability strap

Alternative placement for
Hypalon stability strap



This Hypalon stability strap is
36 cm long (14.2 in)