

### PRINTING AND FITTING SPECIFICATIONS


- Print this document on A4 sheets of paper (21 x 29.7cm).
- Ensure you print at 100 % scale.
- Measure both sides of this box to check scale is correct.
- Fit the prints together following the numbering system on the edge of each sheet. Ensure crosses are aligned.
- Tape the sheets together and cut around the Pack's outline
- When fitting this printed template to your bike, keep in mind that the Frame Pack will be more flexible as it is built from fabric.

10cm  
3.9in

10cm / 3.9in

### SCALE EXAMPLE OF FINAL TEMPLATE

A1  
X

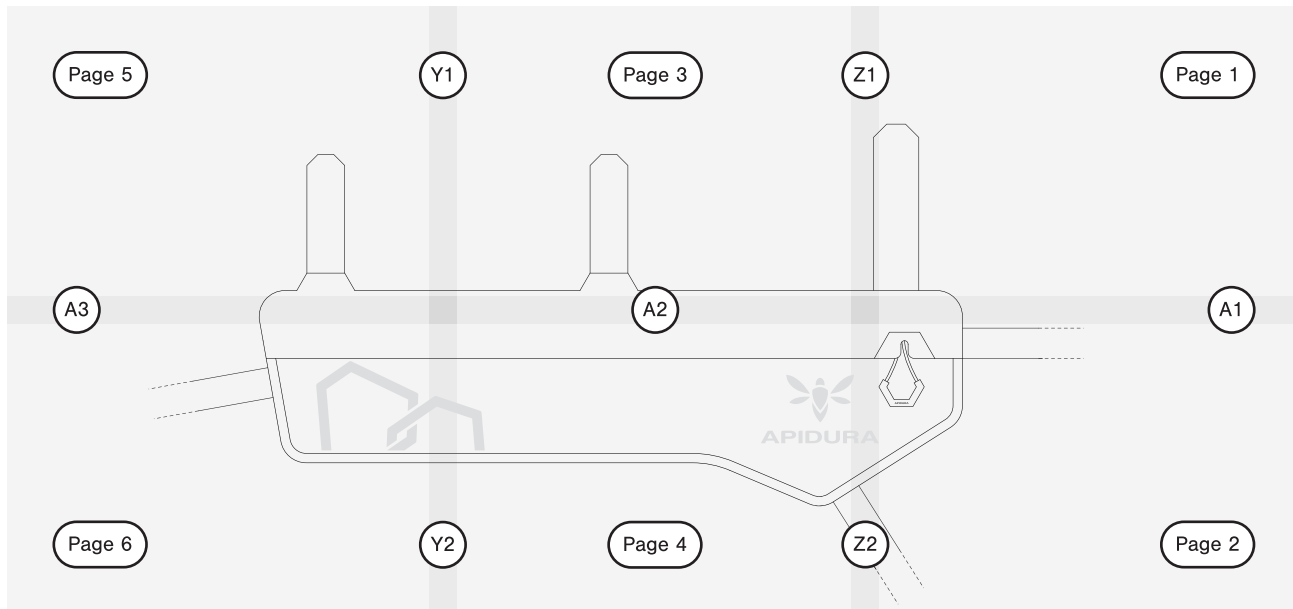


X Z1

X

A1  
X

This webbing strap is  
29cm long (11.4in long)

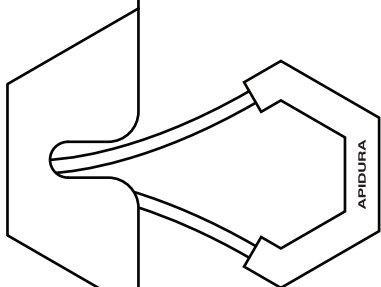

X


X Z2

This webbing strap is  
26cm long (10.2in long)

X Z1

X

A2  
X

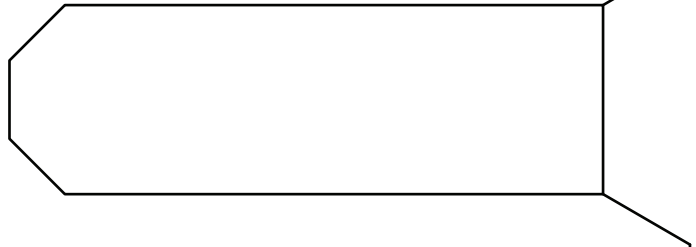

X Y1

X



APIDURA

X Z2

This webbing strap  
26cm long (10.2in long)

X


A2  
X

X

X Y2

X Y1

X

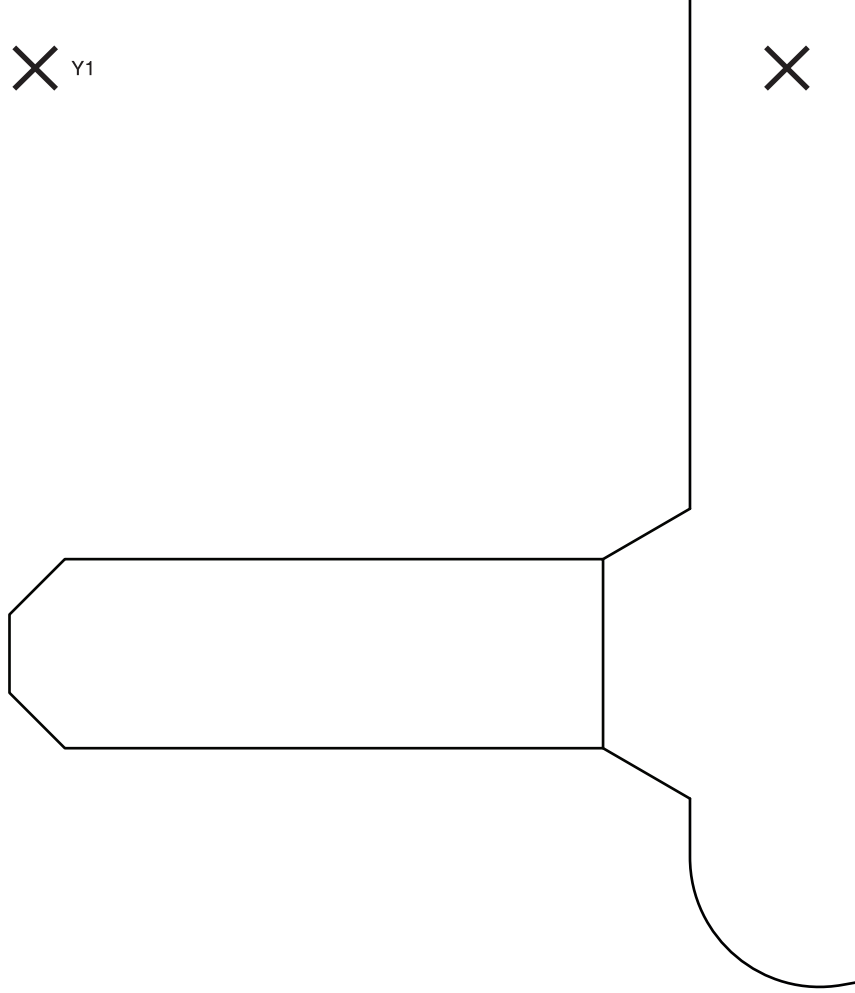


A3  
X



Y2

EXPEDITION FRAME PACK (5L TALL)

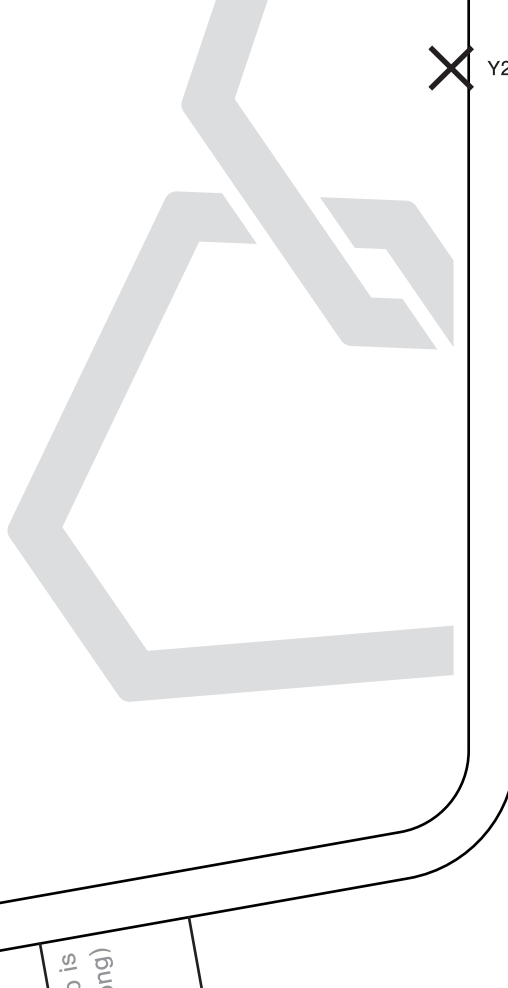

This webbing strap is  
21cm long (8.3in long)

