


### PRINTING AND FITTING SPECIFICATIONS

- Print this document on A4 sheets of paper (21 x 29.7cm).
- Ensure you print at 100 % scale.
- Measure both sides of this box to check scale is correct.
- Fit the prints together following the numbering system on the edge of each sheet. Ensure crosses are aligned.
- Tape the sheets together and cut around the Pack's outline
- When fitting this printed template to your bike, keep in mind that the Frame Pack will be more flexible as it is built from fabric.

10cm  
3.9in

10cm / 3.9in

### SCALE EXAMPLE OF FINAL TEMPLATE

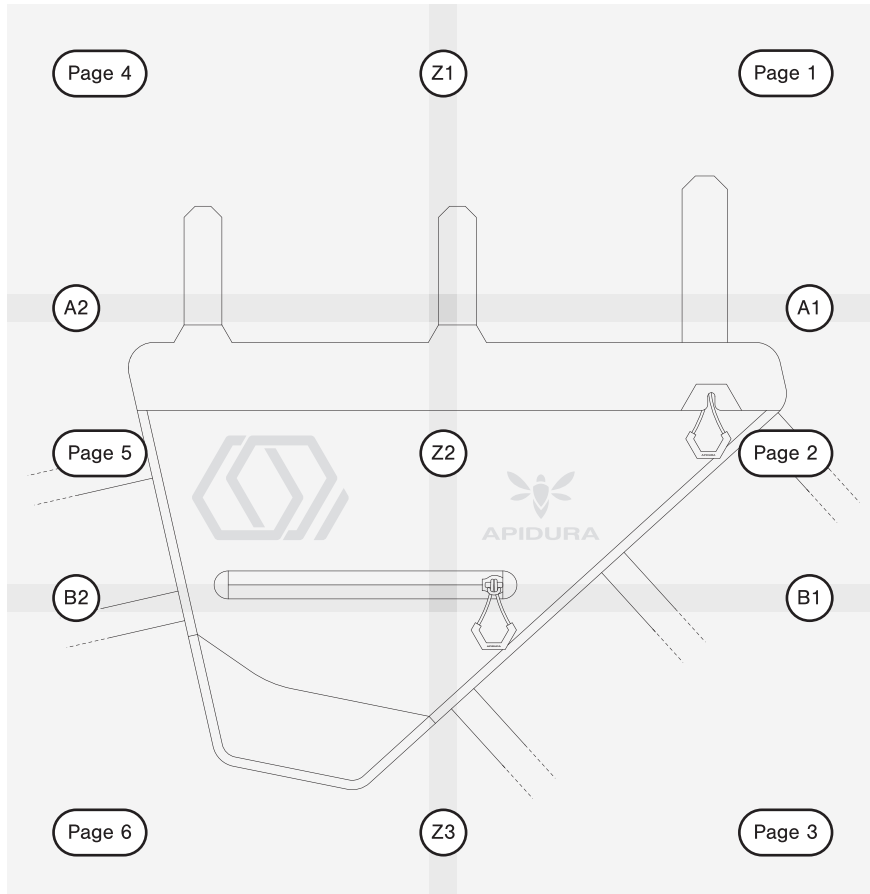


Alternative plan  
for the velo



X Z1



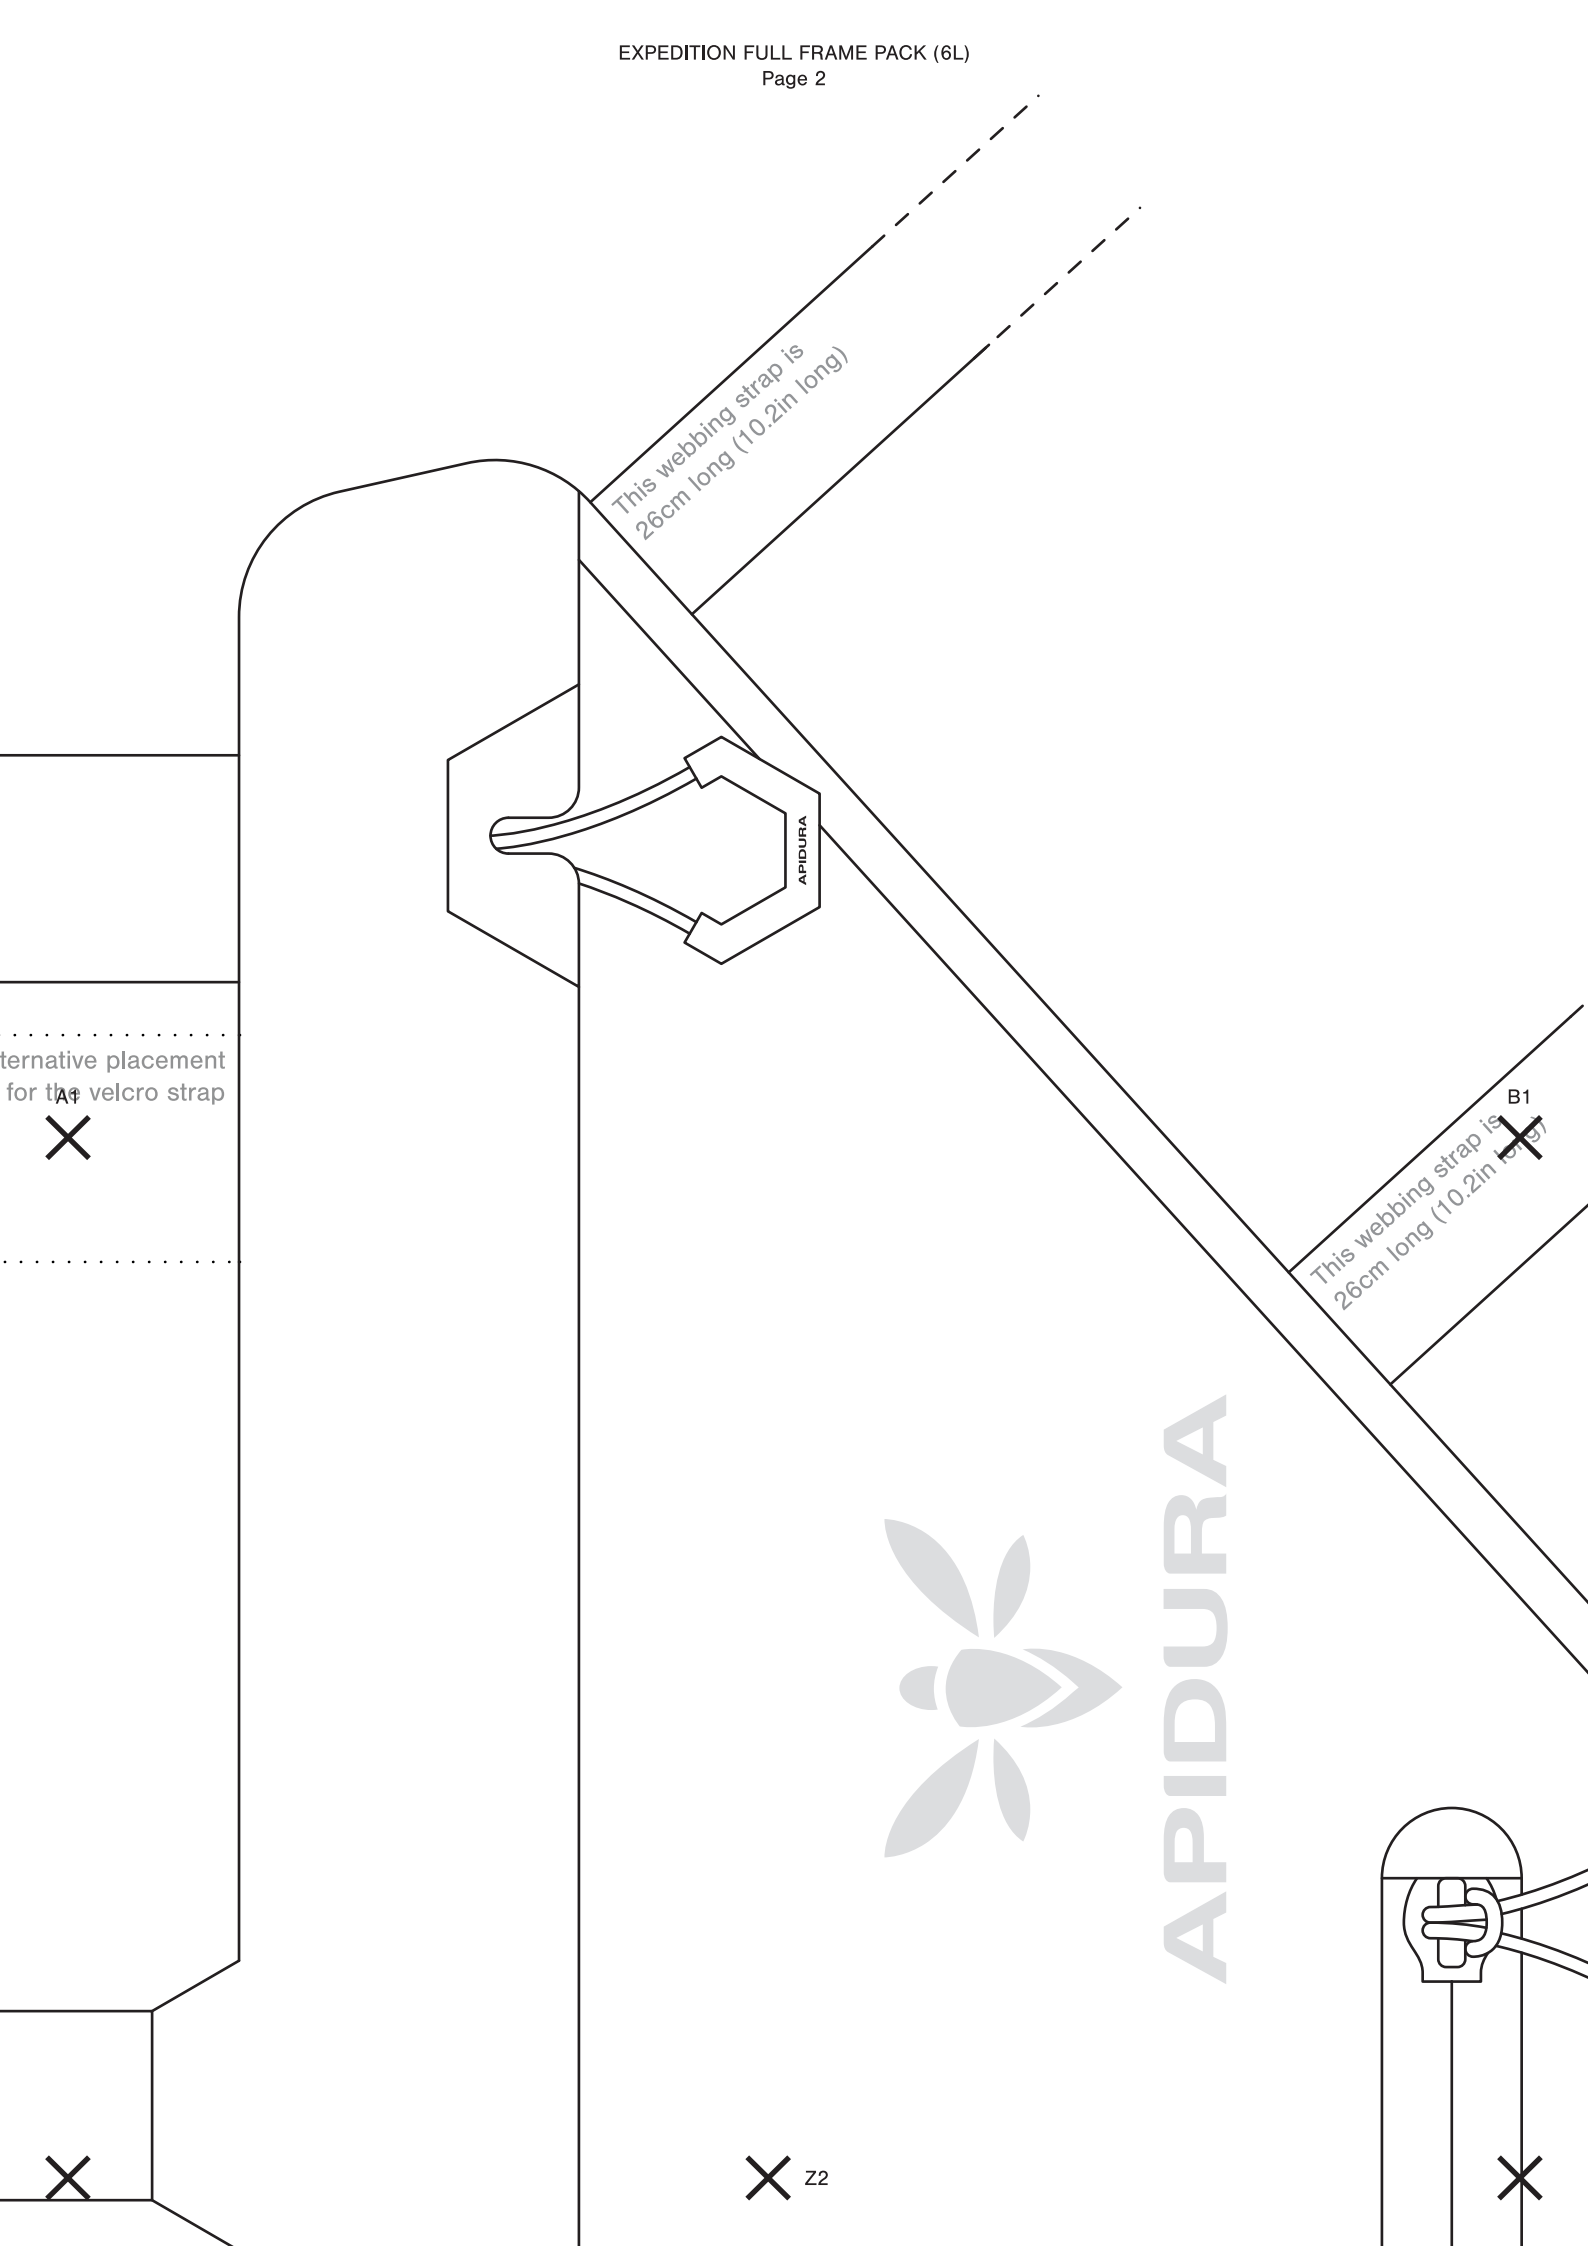

X z1

X

A2  
X





EXPEDITION FULL FRAME PACK (6L)



This webbing strap is  
26cm long (10.2in long)

This webbing strap is  
26cm long (10.2in long)

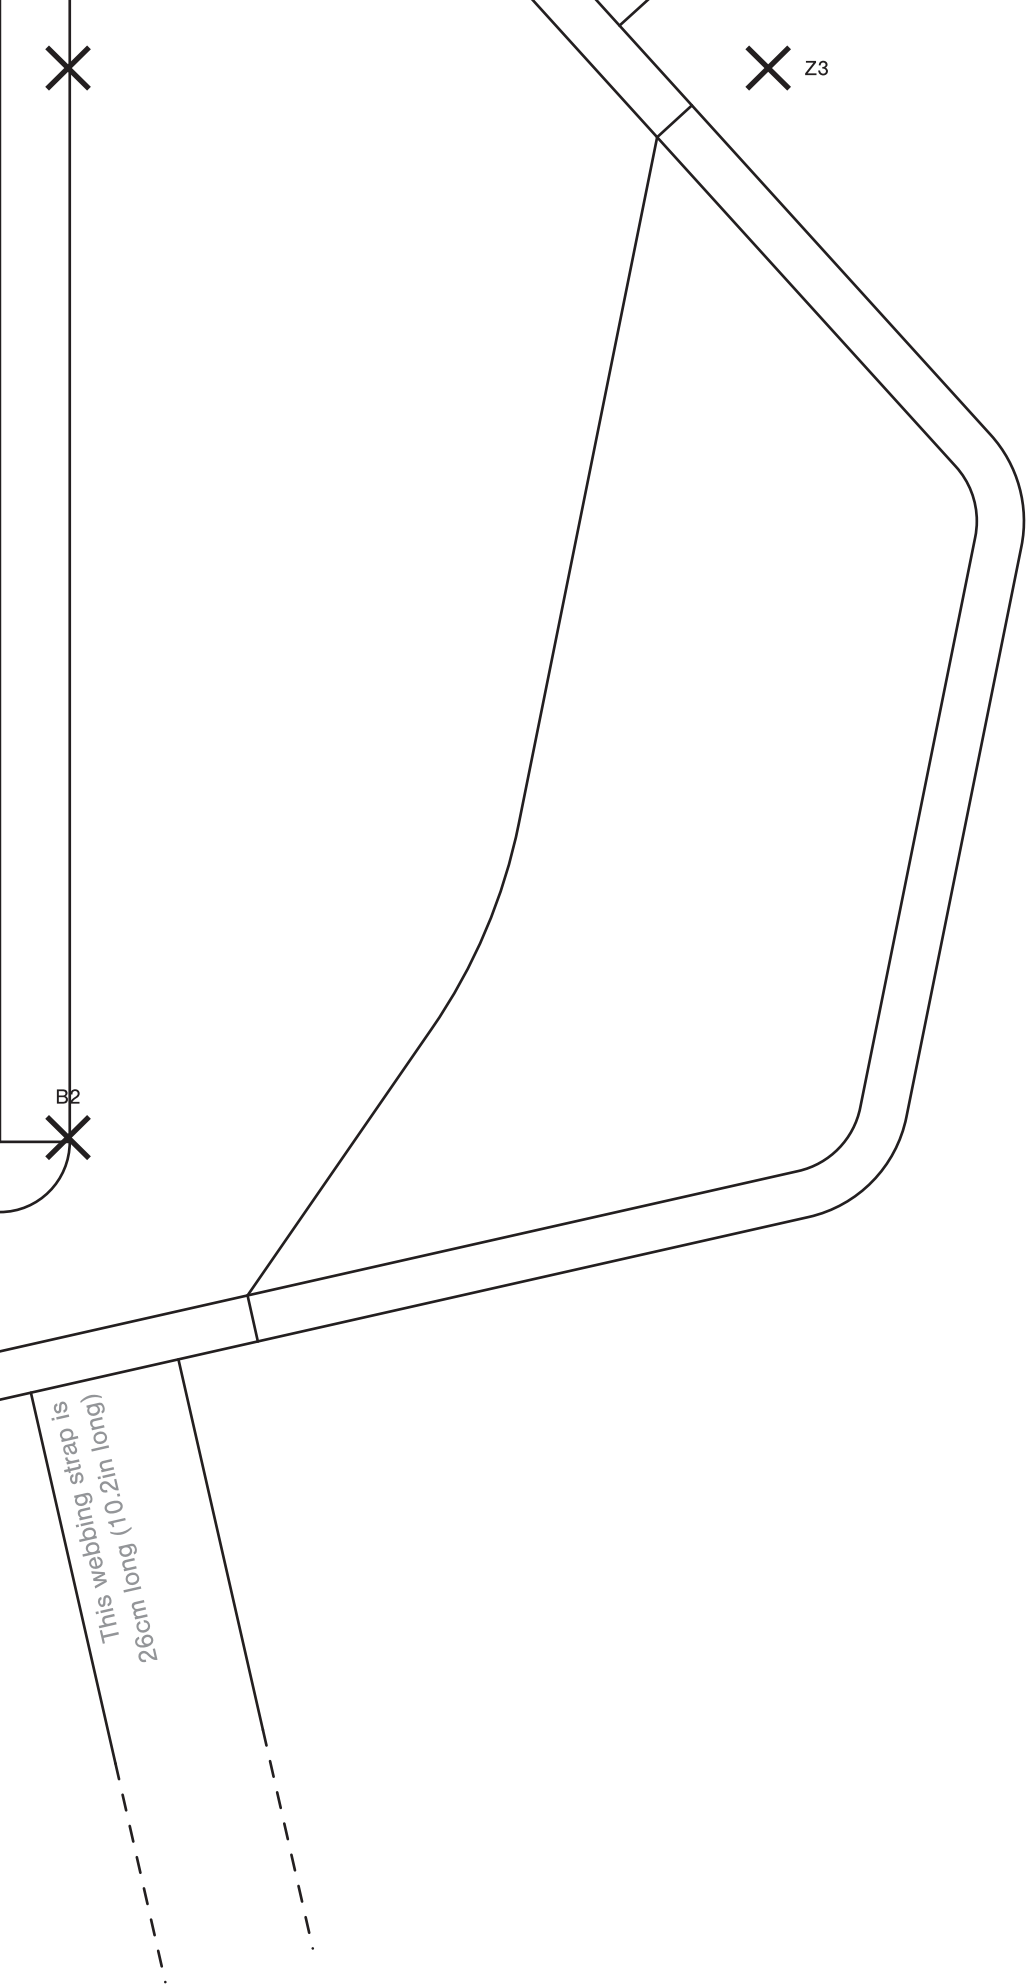

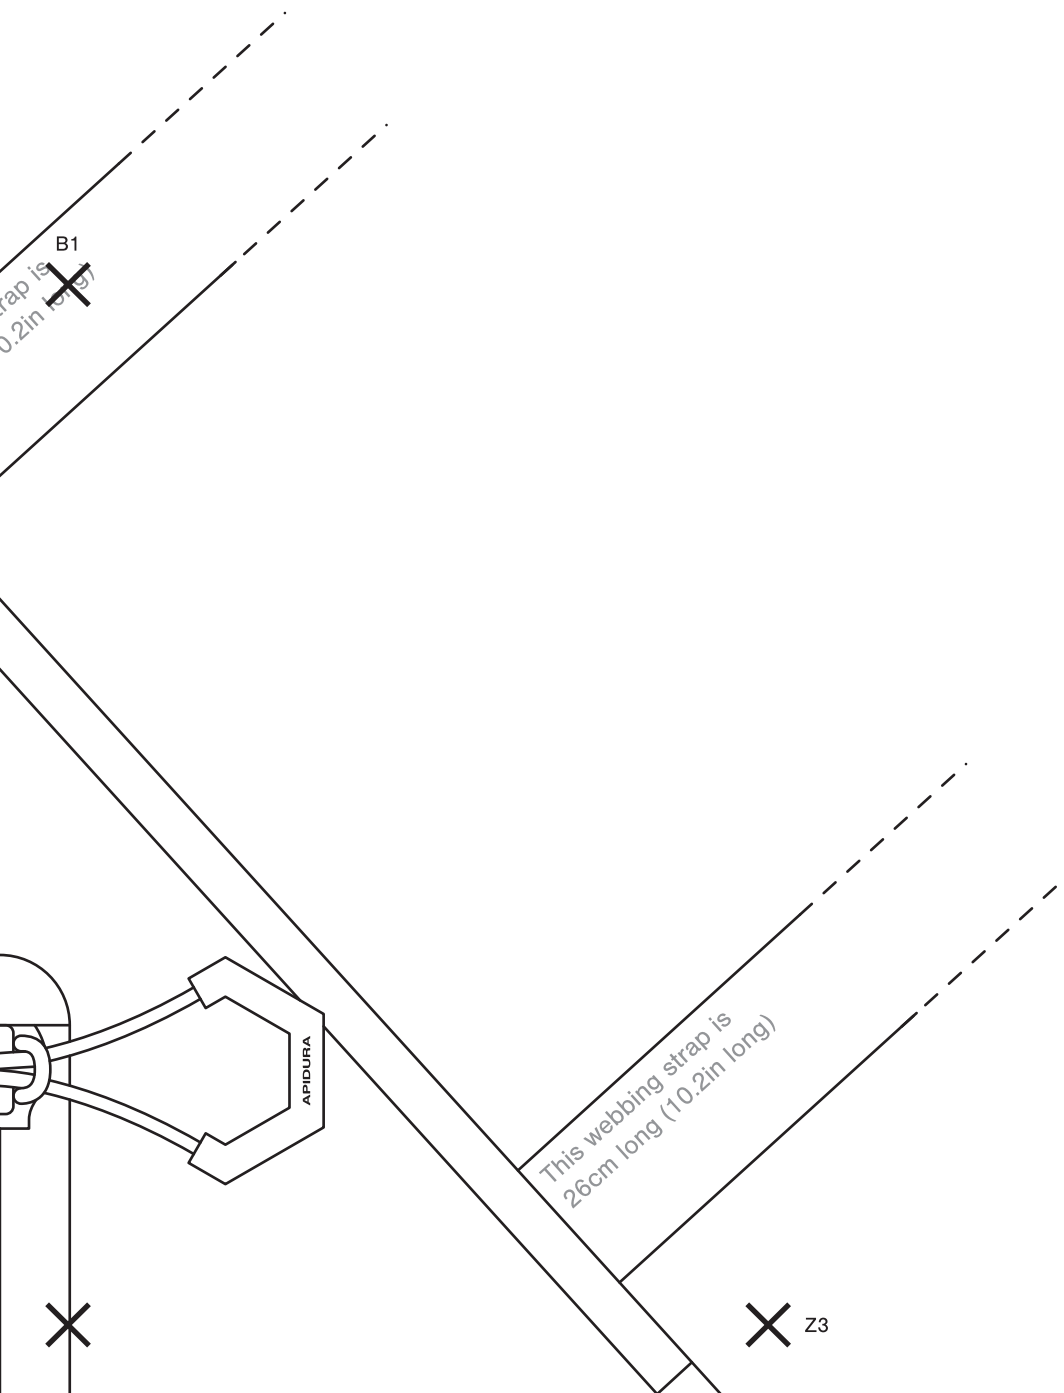

B1

Strap is 10.2in long

This webbing strap is 26cm long (10.2in long)

APIDURA

Z3

X